


Type 4 Valve Cover Installation



Parts List:

- Valve Cover. QTY 1
- O-ring. QTY 1
- Threaded Adapter. QTY 4
- Sealing Washer. QTY 4
- M8 Bolt. QTY 4
- M8 Washer. QTY 4

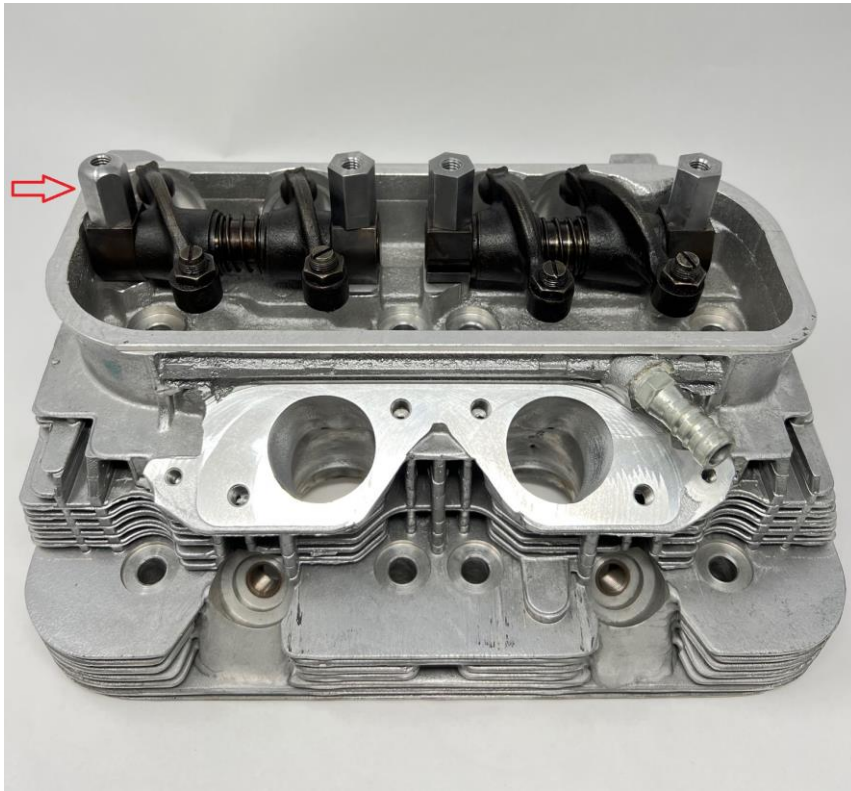

- 1) Install the threaded adapters and torque to 15 Ft Lbs. Ensure the adapter with the radius top is used in the correct location. It is used on the rocker stud closest to the valve cover edge.



- 2) Install the o-ring into the groove of the cover. It is not necessary to use sealant here.



- 3) Place the M8 washer onto the fastener followed by the sealing washer. It is not necessary to use sealant here. Use blue Loctite on the threads of the M8 fasteners.



- 4) Torque the M8 fasteners to 10 Ft lbs.